

## КОНФИГУРАЦИИ ПРИВОДОВ PARKER SLVD-N

Тел. (499) 502 05 03, e-mail: [info@tehzona.net](mailto:info@tehzona.net),  
[www.tehzona.net](http://www.tehzona.net)

### Compact Servo Drive - SLVD-N

	1	2	3	4	5	6	7	8
Order example	SLVD	1	N	S	E			UL

<b>1 Servo family</b>	<b>SLVD</b> Compact Digital Servodrive
<b>2 Drive size (nominal current)</b>	
1	1 A
2	2 A
5	5 A
7	7 A
10	10 A
15	15 A
17	17 A
<b>3 Version</b>	
N	New version
<b>4 Protocol</b>	
S	SBCCAN protocol (standard)
C	CANopen protocol (DS301)
D	CANopen protocol (DS402)
E5	EtherCAT protocol (only with optional board E5 or E6 in the bus system)

<b>5 Encoder input</b>	
<b>Empty field</b>	Resolver
E	EnDat/incremental/SinCos encoder input (from motor feedback)
H	Incremental encoder input with Hall sensor (from motor feedback)
F	SinCos encoder input
<b>6 Optional boards</b>	
<b>Empty field</b>	without optional board
E5	OP-ETCAT - EtherCAT option (for up to 3 SLVD-N, keypad SK158/L not possible)
E6	E5 + keypad SK158/L (for up to 3 SLVD-N)
<b>7 Safety</b>	
<b>Empty field</b>	without STO
R	STO (Safe Torque Off function)
<b>8 Firmware review</b>	
<b>Empty field</b>	without UL certification
UL	UL certification (not for all drive sizes available, please contact your Parker partner)

### Accessories

#### Communication interface

	1	2
Order example	BRIDGEN	PS

<b>1 Bridge (communication interface)</b>	<b>BRIDGEN</b> Bridge N (communication interface)
<b>2 Interface</b>	
PS	with PROFIBUS DP
DS	with DeviceNet
D1S	with DeviceNet "compact"
DU	with Encoder Input - SBCCAN

#### Cables (Bridge - SLVD-N)

	1	2	3	4
Order example	CAVO	BRIDGEX	1	- 2SLVDN

<b>1 Type</b>	<b>CAVO</b> Cable
<b>2 Product application</b>	<b>BRIDGEX</b> Connection Bridge - SLVD-N
<b>3 Cable length (length from Bridge to SLVD-N)</b>	
1	1 m
1.5	1.5 m
2	2 m
<b>4 Number of connections/drives (min. 2, max. 8)</b>	
2SLVDN	for 2 SLVD-N
3SLVDN	for 3 SLVD-N
4SLVDN	for 4 SLVD-N
4SLVDN-R	for 4 SLVD-N-R (only 1.5 m)
8SLVDN	for 8 SLVD-N

**КОНФИГУРАЦИИ ПРИВОДОВ  
PARKER SLVD-N**

Тел. (499) 502 05 03, e-mail: [info@tehzona.net](mailto:info@tehzona.net),  
[www.tehzona.net](http://www.tehzona.net)

SLVD10NC	DRIVER SLVD 10NC
SLVD10NCH	Servodrive N 10A 230V CANopen
SLVD10ND	DRIVER SLVD 10ND - CANOPEN 402
SLVD10NDEUL	Servodrive 10A SbcCan DS402
SLVD10NDF	DRIVER SLVD 10 NDF
SLVD10NDH	Servodrive N 10A 230V CanOpen
SLVD10NDR	Servodrive N 10A 230V CanOpen
SLVD10NE5	DRIVER SLVD 10NE5
SLVD10NE5E	Servodrive N 10A 230V Ethercat
SLVD10NE5E5	Servodrive N 10A 230V Ethercat
SLVD10NE5E5R	Servodrive N 10A 230V Ethercat
SLVD10NE5HE5	Servodrive N 10A 230V Ethercat
SLVD10NE5HE5R	Servodrive N 10A 230V Ethercat
SLVD10NE5HE5RUL	Servodrive N 10A 230V Ethercat
SLVD10NS	VARIATEUR 10A 230V SbcCAN
SLVD10NSE	Servodrive N 10A 230V SBCCan
SLVD10NSER	Servodrive N10A 230V SBC/Can
SLVD10NSEUL	Servodrive N10A 230V SBCCan UL
SLVD10NSF	Servodrive 10A SBCCan
SLVD10NSH	Servodrive N 10A 230V SBCCan
SLVD10NSR	Servodrive N 10A 230V SBCCan
SLVD15MT	DRIVER SLVD 15MT
SLVD15NC	DRIVER SLVD 15 NC
SLVD15NCH	Servodrive N 15A 230V CANopen
SLVD15NCR	Servodrive N 15A 230V CanOpen
SLVD15ND	DRIVER SLVD 15ND
SLVD15NDE	DRIVER SLVD 15NDE
SLVD15NDEUL	Servodrive 15A SbcCan DS402
SLVD15NDR	DRIVER SLVD 15ND
SLVD15NE5E5	DRIVER SLVD 15 NE5E5 + ETH
SLVD15NE5E5R	Servodrive N15A 230V Ethercat
SLVD15NE5H	Servodrive N 15A 230V Ethercat
SLVD15NE5HE5	Servodrive N 15A 230V Ethercat
SLVD15NE5HRUL	Servodrive N 15A 230V Ethercat
SLVD15NS	SLVD 15NS DRIVER
SLVD15NSE	Servodrive N15A 230V SBC/Can
SLVD15NSER	Servodrive N15A 230V SBC/Can

**КОНФИГУРАЦИИ ПРИВОДОВ  
PARKER SLVD-N**

Тел. (499) 502 05 03, e-mail: [info@tehzona.net](mailto:info@tehzona.net),  
[www.tehzona.net](http://www.tehzona.net)

SLVD15NSEUL	Servodrive N15A 230V SBC/Can
SLVD15NSH	DRIVER CON INGR.ENC.INCREMENT.
SLVD15NSR	Servodrive N 15A 230V SBCCan
SLVD15NSUL	SLVD 15NS DRIVER
SLVD17NCR	Servodrive N 17A CanOpen DS301
SLVD17ND	Servodrive N 17A 230V CanOpen
SLVD17NDR	Servodrive N 17A 230V CanOpen
SLVD17NS	DRIVER SLVD 17NS
SLVD17NSER	Servodrive N17A 230V SBC/Can
SLVD17NSR	DRIVER SLVD17NSR STO
SLVD1NC	VARIATEUR 1A 230V CAN
SLVD1NCR	Servodrive 1NC CanOpen DS301
SLVD1ND	DRIVER SLVD 1ND CANOPEN 402
SLVD1NDE	DRIVER SLVD 1NDE
SLVD1NDR	Servodrive N 1A 230V CanOpen
SLVD1NDR/K023	Servodrive N 1A 230V CanOpen
SLVD1NE5	DRIVER SLVD 1NE5 PREDISPOSTO
SLVD1NE5E5	Servodrive N 1A 230V EtherCAT
SLVD1NE5E5R	Servodrive N 1A 230V EtherCAT
SLVD1NE5E6R	Servodrive N 1A 230V EtherCAT
SLVD1NE5E6RUL	Servodrive N 1A 230V EtherCAT
SLVD1NE5UL	DRIVER SLVD 1NE5 PREDISPOSTO
SLVD1NE5ULK026	DRIVER SLVD 1NE5 Predisposiz.
SLVD1NE5ULK029	DRIVER SLVD 1NE5 Predisposiz.
SLVD1NS	Servodrive N 1A 230V SBCCan
SLVD1NSE	Servodrive N 1A 230V SBCCan
SLVD1NSER	Servodrive N 1A 230V SBC/Can
SLVD1NSF	Servodrive N 1A 230V SBCCan
SLVD1NSFR	Servodrive N 1A 230V SBCCan
SLVD1NSR	Servodrive N 1A 230V SBCCan
SLVD1NSUL	Servodrive N 1A 230V SBCCan
SLVD1UL	DRIVER SLVD 1 UL
SLVD2	SLVD 2 DRIVER
SLVD2NC	DRIVER SLVD 2NC
SLVD2NCE	DRIVER SLVD 2NCE
SLVD2ND	Servodrive N 2A 230V CanOpen
SLVD2NDE	Servodrive N 2A 230V CanOpen

**КОНФИГУРАЦИИ ПРИВОДОВ  
PARKER SLVD-N**

Тел. (499) 502 05 03, e-mail: [info@tehzona.net](mailto:info@tehzona.net),  
[www.tehzona.net](http://www.tehzona.net)

SLVD2NDER	Servodrive N 2A 230V CanOpen
SLVD2NDF	DRIVER SLVD 2NDF CANOPEN 402
SLVD2NDFR	Servodrive N 2A 230V CanOpen
SLVD2NDH	DRIVER SLVD 2NDH
SLVD2NDR	Servodrive N 2A 230V CanOpen
SLVD2NDR/K023	Servodrive N 2A 230V CanOpen
SLVD2NDRUL	Servodrive N 2A 230V CanOpen
SLVD2NDUL	Servodrive N 2A 230V CanOpen
SLVD2NE5	DRIVER SLVD 2NE5
SLVD2NE5E	DRIVER SLVD 2NE5E 230V
SLVD2NE5E5	DRIVER SLVD 2NE5E5
SLVD2NE5E5R	Servodrive N 2A 230V EtherCat
SLVD2NE5EE5	DRIVER SLVD 2NE5EE5
SLVD2NE5EUL	Servodrive N 2A 230V EtherCat
SLVD2NE5F	Servodrive N 2A 230V EtherCat
SLVD2NE5H	Servodrive N 2A 230V EtherCat
SLVD2NE5HE5	Servodrive N 2A 230V EtherCat
SLVD2NE5HE5RUL	Servodrive N 2A 230V EtherCat
SLVD2NE5HRUL	Servodrive N 2A 230V EtherCat
SLVD2NE5UL	DRIVER SLVD 2NE5 UL
SLVD2NS	VARIATEUR 2A 230V SbcCAN
SLVD2NSE	DRIVER SLVD 2NSE
SLVD2NSE10	VARIATEUR 2A 230V SbcCAN
SLVD2NSER	DRIVER SLVD 2NSE SbcCan
SLVD2NSF	DRIVER SLVD 2NSF SBC CAN
SLVD2NSFR	Driver SLVD 2NSF SbcCan Sincos
SLVD2NSH	DRIVER SLVD 2NSH CON SONDE DI
SLVD2NSR	DRIVE SLVD2NSR STO
SLVD2NSR/K030	Servodrive N 2A 230V SBCCan
SLVD2NSUL	Servodrive N 2A 230V Sbccan
SLVD5NC	DRIVER SLVD 5NC
SLVD5NCE	DRIVER SLVD 5NCE
SLVD5NCH	Servodrive N 5A 230V CanOpen
SLVD5NCR	Servodrive N 5A 230V CanOpen
SLVD5ND	Servodrive N 5A 230V CanOpen
SLVD5NDE	Servodrive N 5A 230V CanOpen
SLVD5NDER	Servodrive N 5A 230V CanOpen

**КОНФИГУРАЦИИ ПРИВОДОВ  
PARKER SLVD-N**

Тел. (499) 502 05 03, e-mail: [info@tehzona.net](mailto:info@tehzona.net),  
[www.tehzona.net](http://www.tehzona.net)

SLVD5NDEUL	Servodrive N 5A 230V CanOpen
SLVD5NDEUL-K018	Servodrive N 5A 230V CanOpen
SLVD5NDF	DRIVER CANOPEN 402 + INGRESSO
SLVD5NDH	DRIVER SLVD 5NDH - CANOPEN 402
SLVD5NDHR	Servodrive N 5A 230V CanOpen
SLVD5NDR	Servodrive N 5A 230V CanOpen
SLVD5NDRUL	Servodrive N 5A 230V CanOpen
SLVD5NDUL	Servodrive N 5A 230V CanOpen
SLVD5NDUL-K018	Servodrive N 5A 230V CanOpen
SLVD5NDUL-K029	Servodrive N 5A 230V CanOpen
SLVD5NE5	DRIVER SLVD 5NE5 PREDISPOSTO
SLVD5NE5E	Servodrive N 5A 230V EtherCAT
SLVD5NE5E5	DRIVER CON OPZIONE ETHERCAT
SLVD5NE5E5R	Servodrive N 5A 230V Ethercat
SLVD5NE5E6	Servodrive N 5A 230V Ethercat
SLVD5NE5E6R	Servodrive N 5A 230V Ethercat
SLVD5NE5EE5	DRIVER SLVD5NE5EE5 Endat
SLVD5NE5FE5	Servodrive N 5A 230V Ethercat
SLVD5NE5FE5RUL	Servodrive N 5A 230V Ethercat
SLVD5NE5HE5	Servodrive N 5A 230V Ethercat
SLVD5NE5HE5RUL	Servodrive N 5A 230V Ethercat
SLVD5NE5R	Servodrive N 5A 230V Ethercat
SLVD5NE5UL	DRIVER SLVD 5NE5 PREDISPOSTO
SLVD5NS	VARIATEUR 5A 230V SbcCAN
SLVD5NS/K011	VARIATEUR 5A 230V SbcCAN
SLVD5NSE	DRIVER SLVD 5NSE
SLVD5NSE10	VARIATEUR 5A 230V SbcCAN
SLVD5NSER	Servodrive N 5A 230V SBC/Can
SLVD5NSF	DRIVER SLVD 5NSF
SLVD5NSH	DRIVER CON SOND E DI HALL
SLVD5NSP1P2	Servodrive N 5A 230V SBC/Can
SLVD5NSR	DRIVE SLVD5NSR STO
SLVD5NSUL	VARIATEUR 5A 230V SbcCAN UL
SLVD5PRUL	DRIVER SLVD 5PRUL
SLVD7NC	DRIVER SLVD 7NC
SLVD7NCE	DRIVER SLVD 7NCE
SLVD7NCR	Servodrive N 7A 230V

**КОНФИГУРАЦИИ ПРИВОДОВ  
PARKER SLVD-N**

Тел. (499) 502 05 03, e-mail: [info@tehzona.net](mailto:info@tehzona.net),  
[www.tehzona.net](http://www.tehzona.net)

SLVD7ND	DRIVER SLVD 7ND - CANOPEN 402
SLVD7NDE	DRIVER SLVD 7NDE
SLVD7NDER	Servodrive N 7A 230V CanOpen
SLVD7NDF	DRIVER SLVD 7NDF POWER ROAD
SLVD7NDH	DRIVER SLVD 7NDH - CANOPEN 402
SLVD7NDHR	DRIVER SLVD 7NDH - CANOPEN 402
SLVD7NDR	Servodrive N 7A 230V CanOpen
SLVD7NDRUL	Servodrive N 7A 230V CanOpen
SLVD7NE5	DRIVER SLVD 7NE5 PREDISPOSTO
SLVD7NE5E	Servodrive N 7A 230V EtherCAT
SLVD7NE5E5	Servodrive N 7A 230V EtherCAT
SLVD7NE5E5R	Servodrive N 7A 230V Ethercat
SLVD7NE5EE5	Servodrive N 7A 230V EtherCAT
SLVD7NE5F	DRIVER SLVD7NE5F Sinusoidale
SLVD7NE5FE5	Servodrive N 7A 230V Ethercat
SLVD7NE5FE5R	Servodrive N 7A 230V Ethercat
SLVD7NE5FUL	DRIVER SLVD7NE5F Sinusoidale
SLVD7NE5HE5	Servodrive N 7A 230V EtherCAT
SLVD7NE5HE5R	Servodrive N 7A 230V EtherCAT
SLVD7NE5HE5RUL	Servodrive N 7A 230V EtherCAT
SLVD7NE5R	Servodrive N 7A 230V EtherCAT
SLVD7NE5UL	DRIVER SLVD 7NE5 PREDISPOSTO
SLVD7NS	SLVD 7NS DRIVER
SLVD7NS/K009	Servodrive N 7A 230V
SLVD7NSE	DRIVER SLVD 7NSE
SLVD7NSE10	VARIATEUR 5A 230V SbcCAN
SLVD7NSER	Servodrive N 7A 230V SBC/Can
SLVD7NSF	DRIVER SLVD 7NSF
SLVD7NSFR	Servodrive N 7A 230V SBCCan
SLVD7NSH	DRIVER CON INGR.ENC.INCREMENT.
SLVD7NSR	DRIVE SLVD7NSR STO
SLVD7NSUL	Servodrive N 7A 230V SBCCan
SLVD7UL	DRIVER SLVD 7 UL